Reset Mikrotik password via NetInstall

Run Netinstall. Select 'Boot Server Enabled' and enter IP address in the same range as your PC. Turn the router ON, and you should see it in the list on the left of the screen. Now remove the tick 'Keep old configuration', click 'Browse' and open folder with individual RouterOS packets. Click 'Install' and when the process is over, pres 'Enter' on console, or 'Reboot' button.

(Mikrotik Router Installer v3.22		
Routers/Drives			
	Label MAC address / Media Status	Software ID: NUD8-PTT	Help
	Instreme 00:0C:42:21:F1:E9 Ready	Key: Key: Key:	Browse
		Keep old configuration	Get key
		IP address: /	
		Gateway:	
	Selected 1 package(s)	Baud rate: 115200	
	Make floppy Net booting Install Cancel	Configure script:	
Packages			
	Sets: Previous Install Save set Delete set		
	From: C:\Documents and Settings\monitor\Desktop Browse Select all Select none		
	Name Version Description		

From: https://wiki.plecko.hr/ - **Eureka Moment**

Permanent link: https://wiki.plecko.hr/doku.php?id=mikrotik:conf:pwd_reset_netinstall



Last update: 2019/10/31 09:05